

# MINDRAY Quick Reference Guide


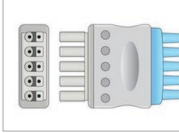



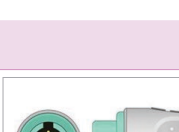

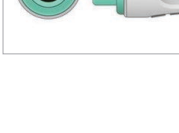

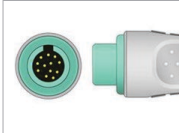


Accessories for: Accutorr 3, Accutorr 7, BeneView T1, BeneView T5, DPM6, DPM7, MEC 12, MPM, Passport 12, Passport 8, Beneheart D6, BeneView T8, PM 6800

## SpO2

Nellcor OxiMax		OEM #	Reorder #
		0060-00-0051 or DS-100A	S403-01P0
		0010-20-42712	E710P-480
Masimo		OEM #	Reorder #
		0600-00-0126 or 1863	S403-490
		115-020768-00	E708M-48R0




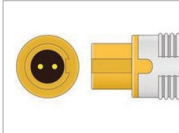

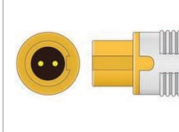
## ECG

Leadwires		OEM #	Reorder #
		3 Leads Snap 0012-00-1261-07	LR3-90S0
		3 Leads Pinch 0012-00-1170	LR3-90P0
		5 Leads Snap 0012-00-1261-01	LR5-90S0
		5 Leads Pinch 0012-00-1262-01	LR5-90P0
Trunk		OEM #	Reorder #
		3/5 Leads 0010-30-42719	TR-25120

## NIBP

		OEM #	Reorder #
		0683-15-0003-01	F1880S0
			BP12
		6200-30-09688	AS-16-150

## Temp

		OEM #	Reorder #
		0206-03-0209-02	DMQ-D-20-N0 box of 20
		040-001235-00	DMR-30-AD0
		0011-30-37393	DMR-AS0